

**User Guide**

FCTP-GM2203 / 19433460  
FCTP-GM2203G / 19433461  
FCTP-GM2403 / 19433464

# Trailer Camera System

**Silverado/Sierra Light Duty Trucks (2022-Present)**  
**Silverado/Sierra Heavy Duty Trucks (2024-Present)**






## To Access the Menu

Press and hold the “HOME” button that is next to the Power Button/Volume Dial on the factory dash panel (Fig. A) for three seconds to enter the camera menu. Press “OK” to accept the terms and continue (Fig B.). Use the touch screen to select the desired view (Fig C.). Press the “HOME” button to return to the previous screen.

Fig A.



Fig B.

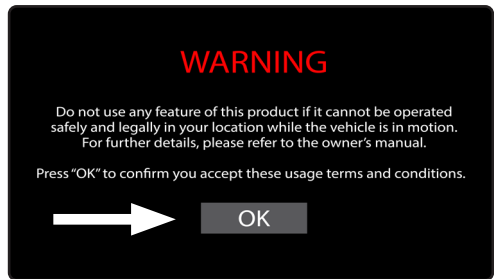


Using the Touch screen user interface, select your desired view.

Use this button to see the left side camera

Use this button to see the optional camera (if installed)

Use this button to see the right side camera

Fig C.

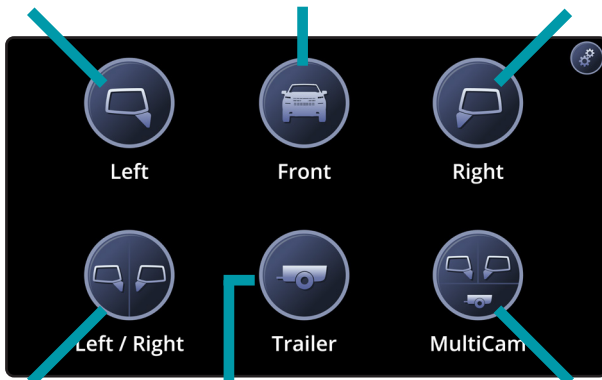

Use this button to see left/right view

Use this button to see the wireless trailer camera

Use this button to see multicam view

FCTP-GM2203/2203G/2403  
19433460/19433461/19433464

Trailer Camera System




## Camera Setup

Fig A.



Fig B.

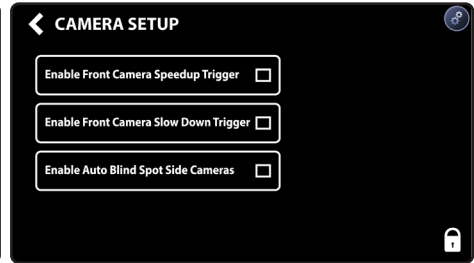

Press the gear icon in the top right corner (Fig A.) to enter the camera setup menu. From here you can enable / disable GMS4 functions (Fig B.).

- 1. Enable Front Camera Speedup Trigger** - When enabled, the front camera will display when exiting reverse and turn off after 8 MPH.
- 2. Enable Front Camera Slow Down Trigger** - When enabled, the front camera will display when speed is reduced below 10MPH and the steering wheel is turned more than 15 degrees. This prevents unwanted front camera activation in stop and go traffic. (Note: Vehicle speed must first exceed 15 MPH to activate this feature)
- 3. Enable Auto Blind Spot Side Cameras** - When enabled, blind spot cameras will display on the screen when the turn signals are activated.

If either of the Front camera features are selected on the camera setup screen the “Front” icon (shown to the right) will be displayed on the camera menu.



Front

If neither of the Front camera features are selected on the camera setup screen the “Other” icon (shown to the right) will be displayed on the camera menu.



Other

## Installer Setup

Fig A.


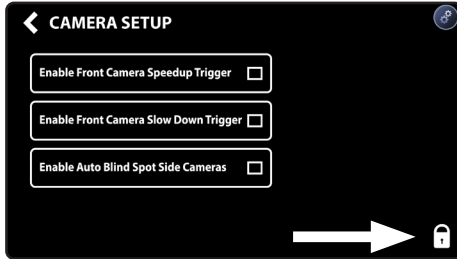


Fig B.



Press and hold the small lock icon in the bottom right corner (Fig A.) of the camera setup menu to access the Installer setup. In this menu you can adjust the following items:

**1. Display Front/Other in Multicam View** - This option displays the Front/Other camera in 3-way split view. This will change the icon on the camera menu to one of these two icons depending on the selections made in the Camera Setup menu.

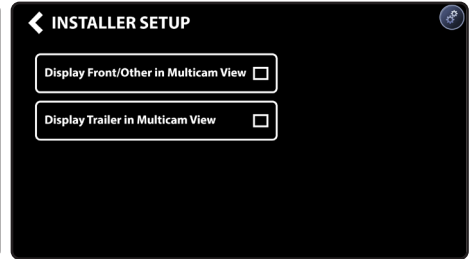

**2. Display Trailer in Multicam View** - This option displays the Trailer camera in 3-way split view. This will change the icon on the camera menu to the following icon.



### PLEASE NOTE

The Intellihaul wireless trailer camera is accessible while the vehicle is in reverse. After 7 seconds, press and release the **“HOME”** button to access.

**FCTP-GM2203/2203G/2403**  
**19433460/19433461/19433464**  
Trailing Camera System



## Notes:

AGREEMENT: End user agrees to use this product in compliance with the instructions and terms of use above and with all State and Federal laws. EchoMaster provides instructions and safety warnings with respect to this product and disclaims all liability for any use not in conformity with those instructions or other misuse of its product. If you do not agree, please discontinue use immediately and contact EchoMaster. This product is intended for off-road use and passenger use only.



*Stinger*

Clearwater Florida 33760

EchoMaster is a power brand of Stinger.

**[www.echomaster.com](http://www.echomaster.com)**

**email - [gmsupport@echomaster.com](mailto:gmsupport@echomaster.com) - tel - 866-766-2267 (US)**

REV. DC091523